www.zcg.com.au

INSTALLATION GUIDE 0 0 0

N-type female termination at base

IP67 rated within an ABS radome

Simple installation via the threaded mounting section



ANTENNA DESCRIPTION

The ZCG-EEH-L01 low profile antenna is suitable for both vehicle or fixed position mounting for a wide range of applications:

- S Mobile phone reception improvement
- Wireless data transfer
- Machine-to-machine (M2M)
- Internet of things (IoT)
- Telemetry applications

The ZCG-EEH-L01 comes standard with a N-type female bulkhead termination as the mounting thread of the antenna.

The antenna delivers 2.1 dBi gain.

The ZCG-EEH-L01 is encased in a ASA radome to IP67 rating, suitable for harsh environments in either a fixed position or vehicle mounted applications.

A detailed specification sheet is available to download from www.zcg.com.au

TUNING

The antenna has been factory tuned to the 4G LTE, 4G, 3G and WiFi 698-960 MHz and 1710-2690 MHz mobile phone networks.

VSWR has been optimised to better than 2.7:1 across the bandwidth specified.

This tuning cannot be altered.

SELECTING THE MOUNTING POSITION

No metal ground plane is necessary for the antenna to operate effectively.

Typical mounting positions for this antenna are on a structure, a vehicles bull bar, the boot of a sedan or a truck mirror using the appropriate bracket with a minimum 16mm diameter hole.

To achieve best performance from your antenna, these are the important principles you should consider when selecting the mounting point :

- 1. Mount the antenna in as high a place as possible.
- 2. Mount the antenna as far away from other antennas and metallic objects as possible to avoid distortion of the 360° omni-directional pattern and interference. At least 350mm side clearance is desireable, preferably more.
- 3. Mount the antenna vertical, not at an angle.

INSTALLATION GUIDE

Remove the nut and washer from the threaded base, leaving the rubber gasket on the antenna. Pass the N-type female bulkhead through the hole of your mounting bracket or mounting hole, ensure the rubber gasket sits flush with the mounting surface.

Thread the washer and then the nut back up the N-type female bulkhead, ensure the nut is tight enough to secure the antenna.

Ensure the rubber gasket is sitting flush and water-sealing against your mounting surface.

Route your cable carefully to your antenna. Ensure that the cable is not stretched excessively and there are no sharp kinks. Avoid high heat areas, high interference areas or areas with moving parts.

IMPORTANT : <u>Leave some slack</u> in the cable at the point where the cable and termination fits to the antenna so as not to place unnecessary tension on the cable and antenna termination.

Use cable ties, but do not pull so tight as to crush the cable. A damaged feeder cable is a cause of high VSWR and reduced performance.

Connect your cable to your device, power up the system and check the performance. If any issues, immediately power down system and check all points of your system.

The maximum input power rating is 5 Watts.

Installation is now complete.







Specifications are subject to change without prior notice © ZCG Scalar Pty Ltd www.zcg.com.au DOC:110122

PO Box 7, Lindenow, Victoria, Australia, 3865 P: +61 3 5157 1203 F: +61 3 5157 1641 E: sales@zcg.com.au